


ISTRUZIONI DI MONTAGGIO

■ SUPPORTO A PAVIMENTO CON BACINELLA "SBP"

INSTRUCTIONS: FLOOR SUPPORTS WITH TRAY

INSTRUCCIONES DE MONTAJE: SOPORTES DE SUELO

COD. 11105045 - 11105046 - 11105047

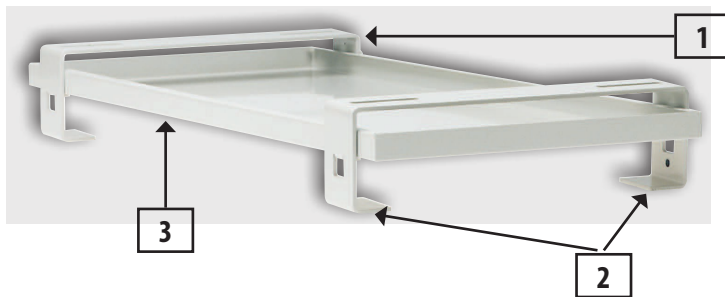

1

BULLONE M 8 X 16 / BOLTS M 8X16 / PERNO M8X16

2

NEOPRENE NERO / BLACK NEOPRENE / NEOPRENO NEGRO

3

PORTAGOMMA IN PLASTICA A 90° / WATER COLLECTOR PIPE / PIPETA PARA RECOLECCION DE LA CONDENSACION



by  **Tecnosystemi**
group

Tecnosystemi S.p.A.

Via Mattei, 2/4 - Z. I. San Giacomo di Veglia
31029 Vittorio Veneto (Treviso)

Tel. / Phone +39 0438 500044 Fax +39 0438 501516
Email: info@tecnosystemi.com

www.tecnosystemi.com